

PARTIGAS OPERATING INSTRUCTIONS

- If the cylinder is fitted with a plug, check that the valve is closed and remove the plug with a spanner or Allen key
- Screw the inflator into the cylinder valve by hand - Only hand-tight pressure is required
- Open the cylinder valve by turning the valve anti-clockwise - A click is usually heard as the inflator is pressurised
- Hold the neck of the balloon over the rubber nozzle and gently bend the nozzle in any direction
- Release the nozzle when the balloon is inflated to the desired size
- Remove the balloon from the nozzle and twist the neck for approximately 3 cm
- Pass the twisted balloon neck through the clip at least twice. The balloon is now sealed and ready for use
- Close the cylinder valve by turning the valve clockwise
- Release any residual pressure in the inflator by tilting the nozzle in any direction
- Unscrew the inflator from the cylinder valve
- If a plug was supplied, replace it and tighten with a spanner or Allen key